


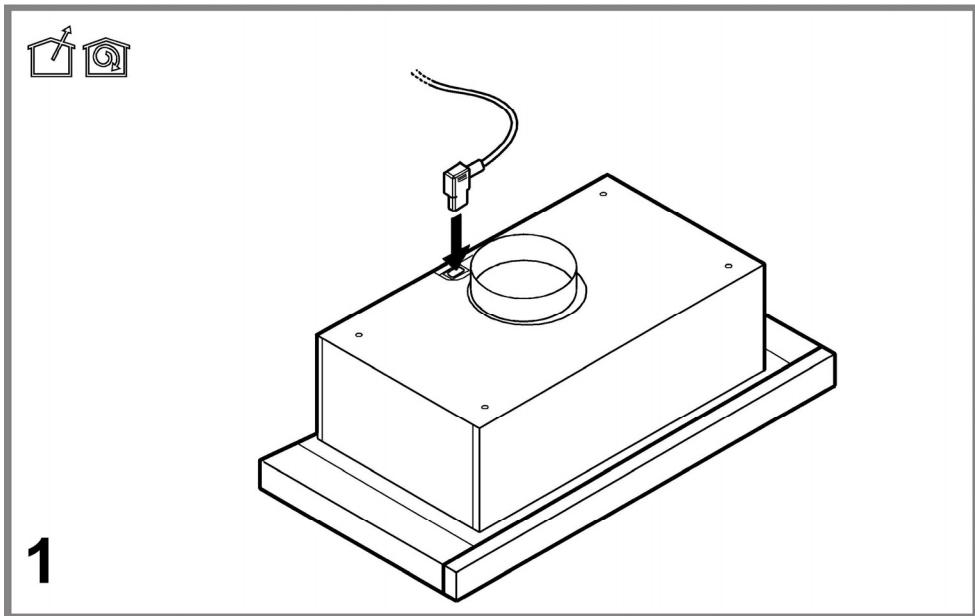



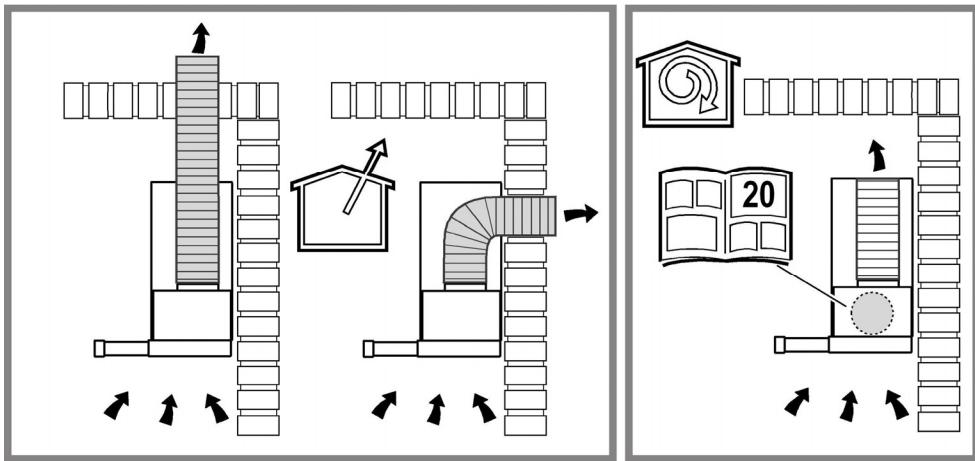


IT	Istruzioni di montaggio e d'uso
EN	Instruction on mounting and use
DE	Montage- und Gebrauchsanweisung
FR	Prescriptions de montage et mode d'emploi
NL	Montagevoorschriften en gebruiksaanwijzingen
ES	Montaje y modo de empleo
PT	Instruções para montagem e utilização
EL	ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ ΚΑΙ ΧΡΗΣΗΣ
SV	Monterings- och bruksanvisningar
FI	Asennus- ja käyttöohjeet
NO	Instrukser for montering og bruk
DA	Bruger- og monteringsvejledning
PL	Instrukcja montażu i obsługi
CS	Návod na montáž a používání
SK	Návod k montáži a užití
HU	Felszerelési és használati utasítás
BG	Инструкции за монтаж и употреба
RO	INSTRUCTII DE MONTAJ SI FOLOSIRE
RU	Инструкции по монтажу и эксплуатации
UK	Інструкція з монтажу і експлуатації
ET	Paigaldus- ja kasutusjuhend
LT	montavimo ir naudojimosi instrukcija
LV	ierīkošanas un izmantošanas instrukcija
SR	Upustva za montažu i upotrebu
SL	Navodila za montažo in uporabo
HR	Upustvta za montažu i za uporabu
TR	Montaj ve kullanım talimatları
AR	عمل طرق التركيب وال الاست

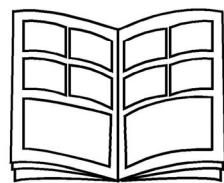

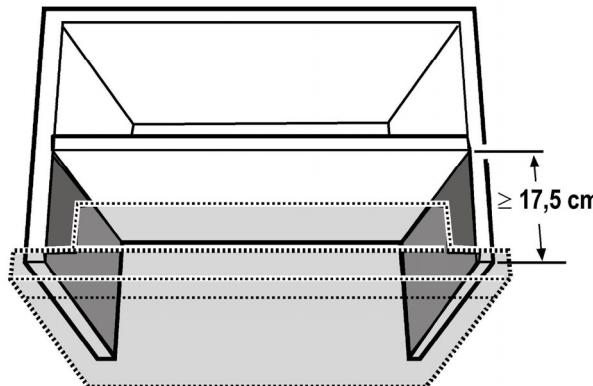


* 1-6/7-9-10-11-
12-13-14-15-16-
17-18-19-20-21

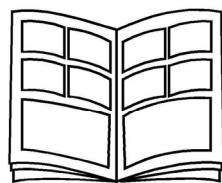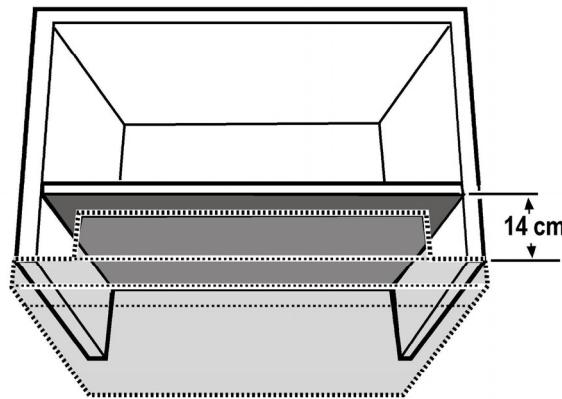


* 1-3-4-5-6/7-8-
10-16-17-18-19-
20-21




3


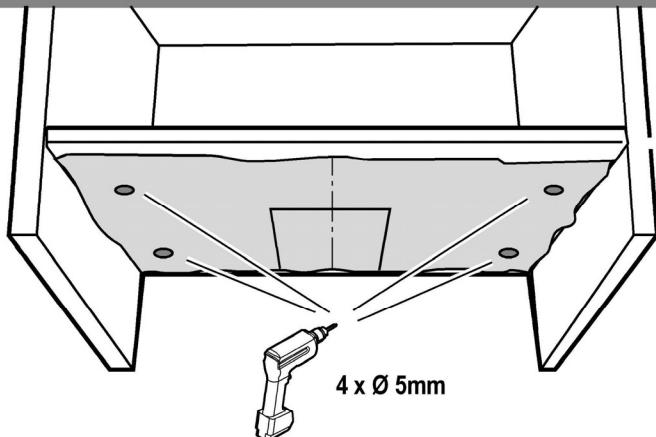


4



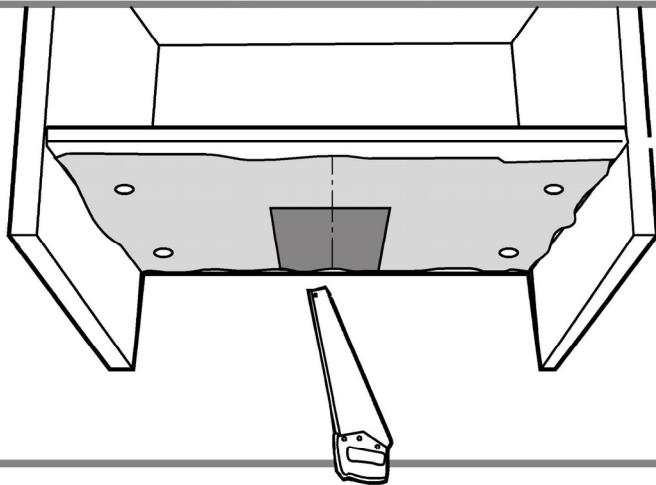


5


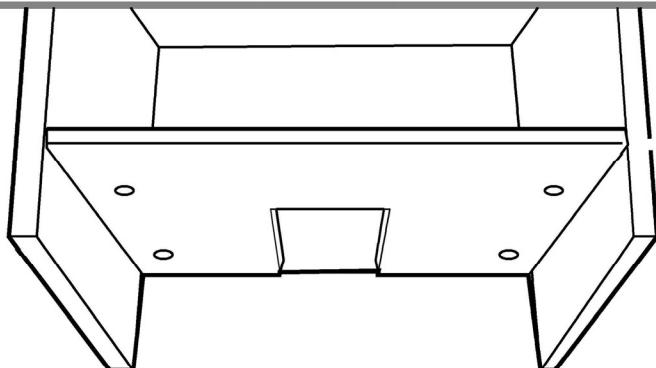


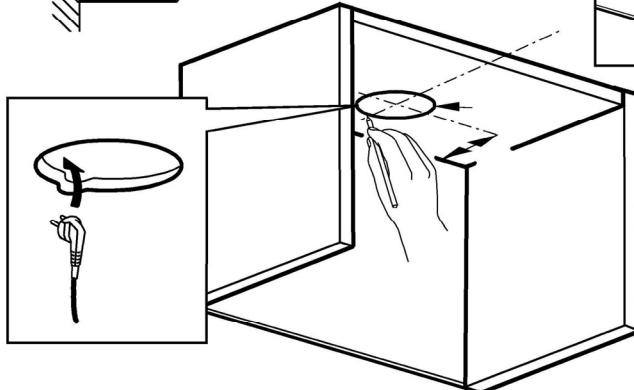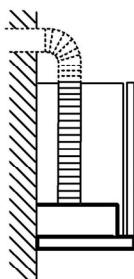









6

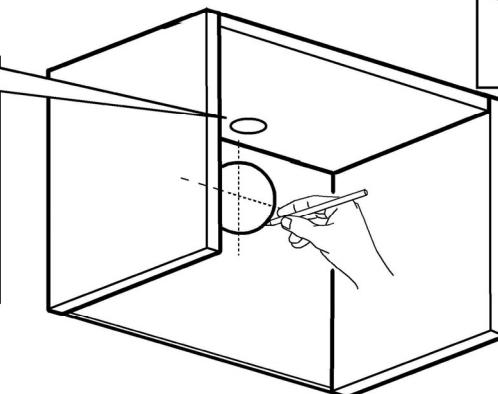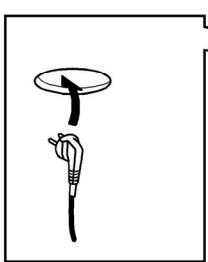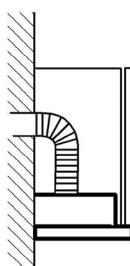



7

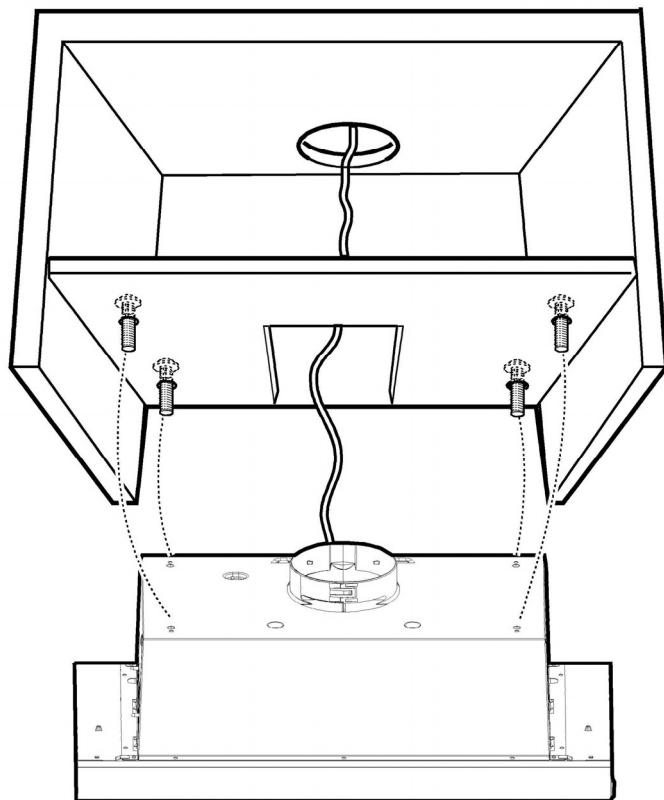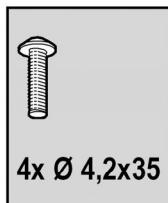




8

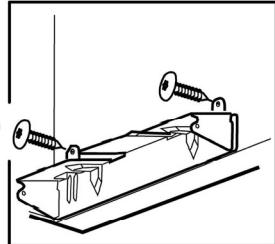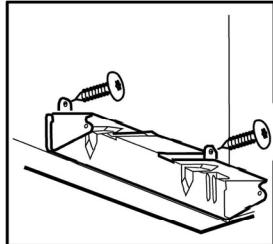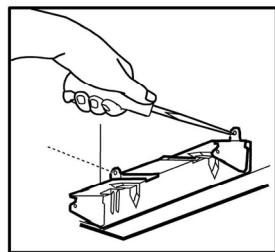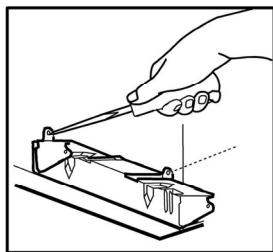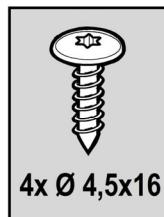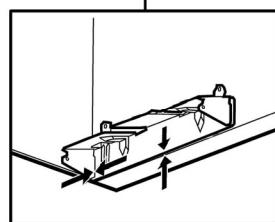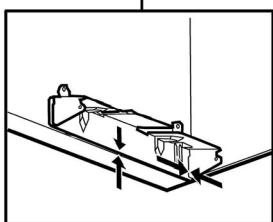
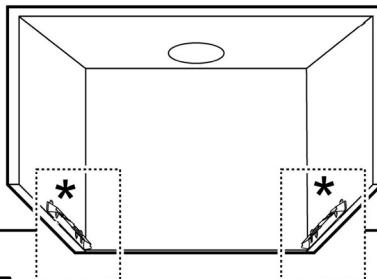


9


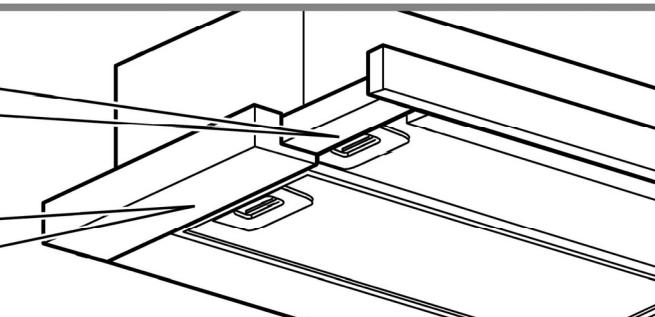
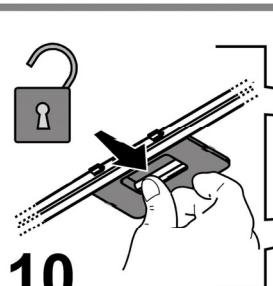







10

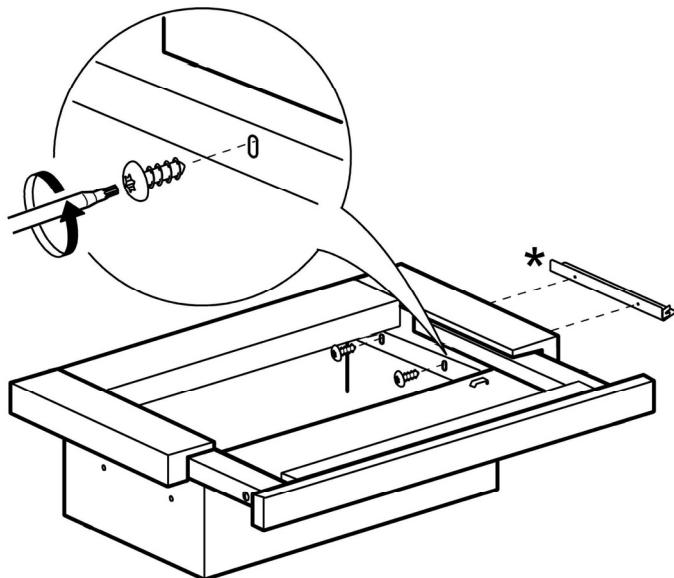
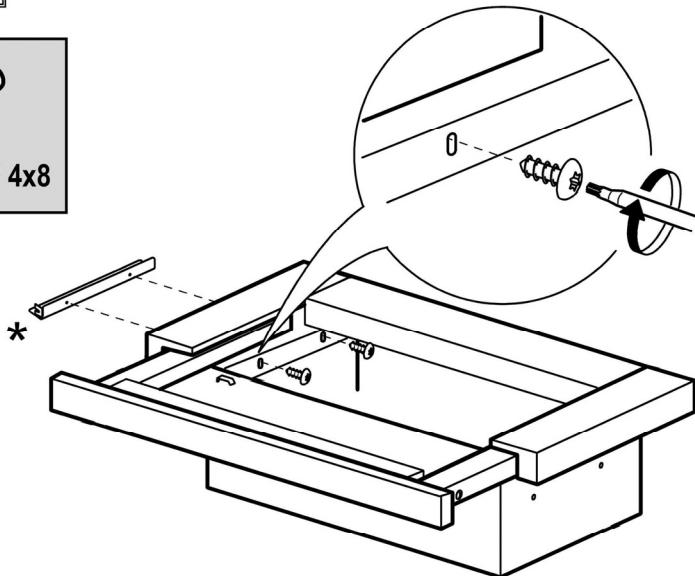
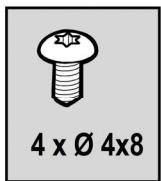


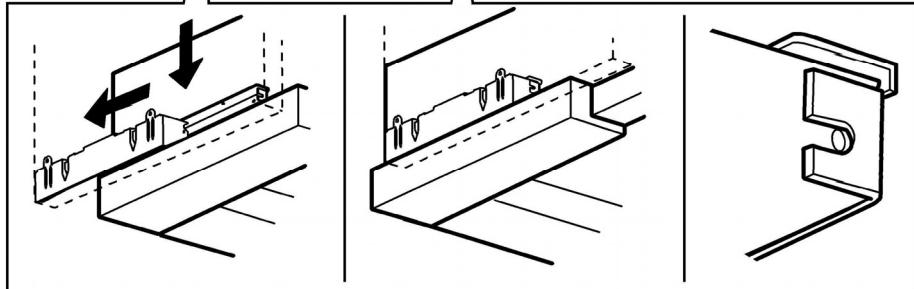
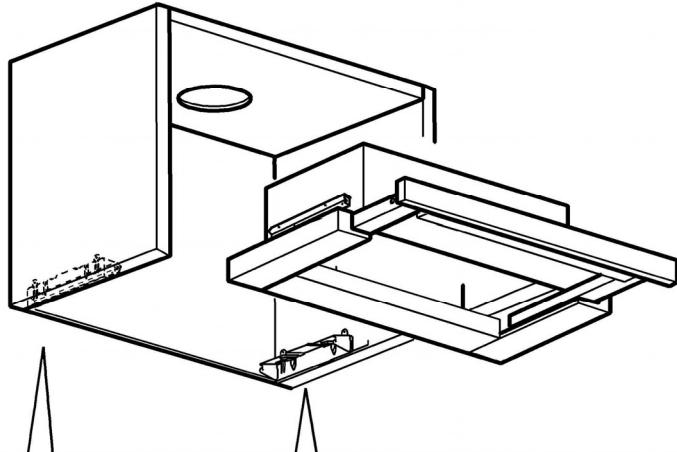







12

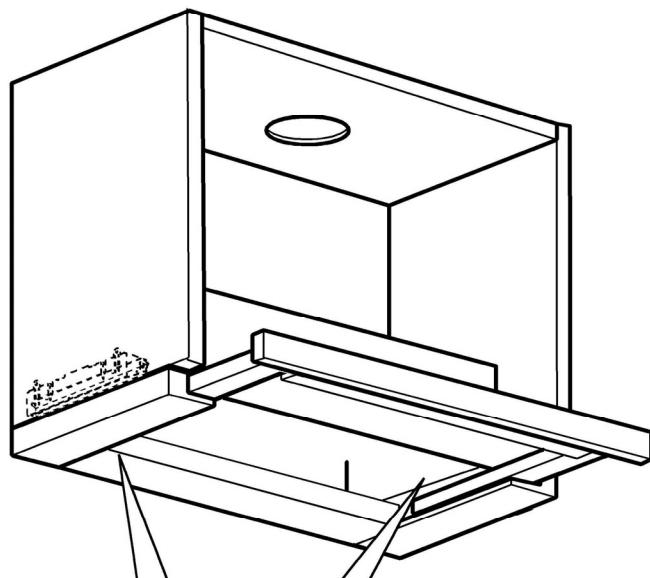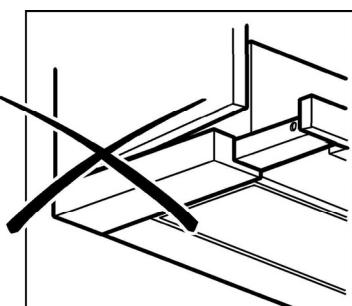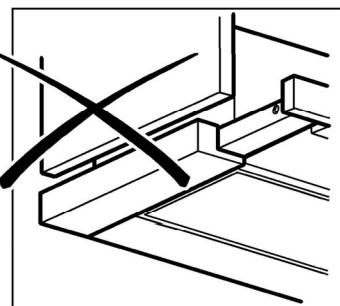

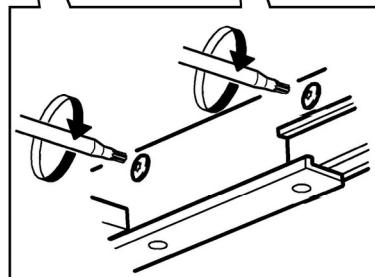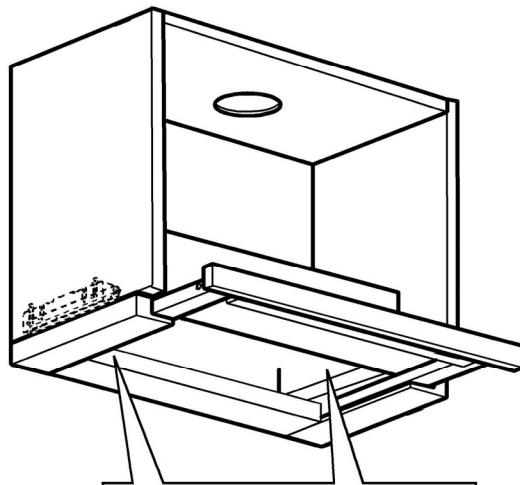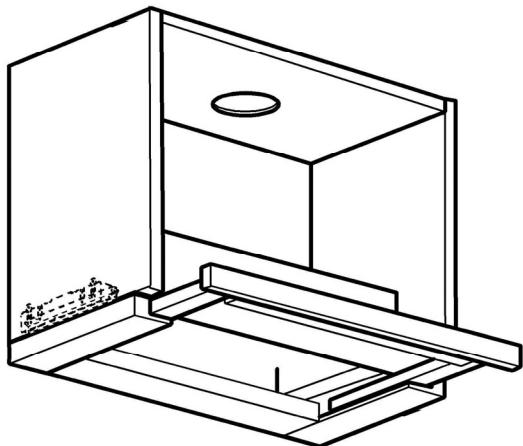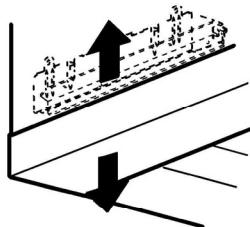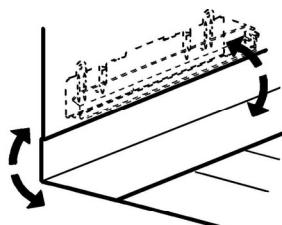


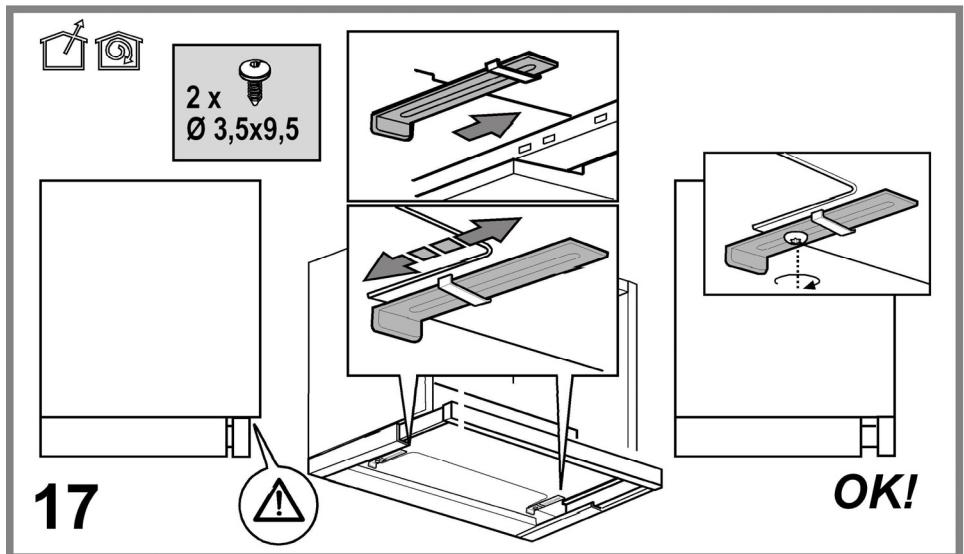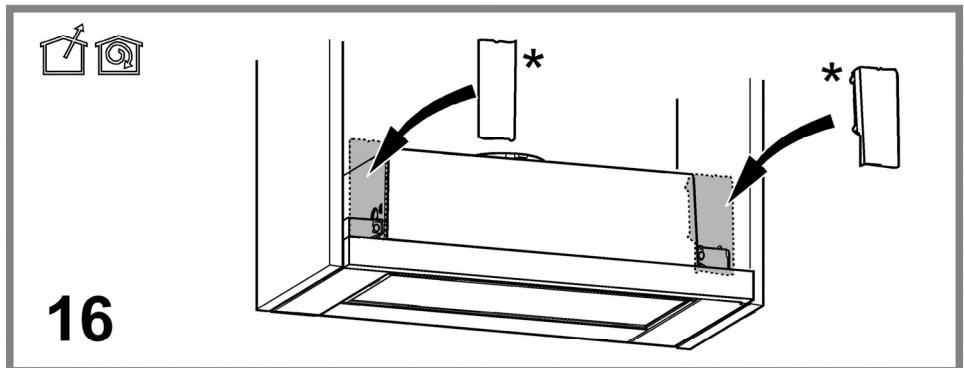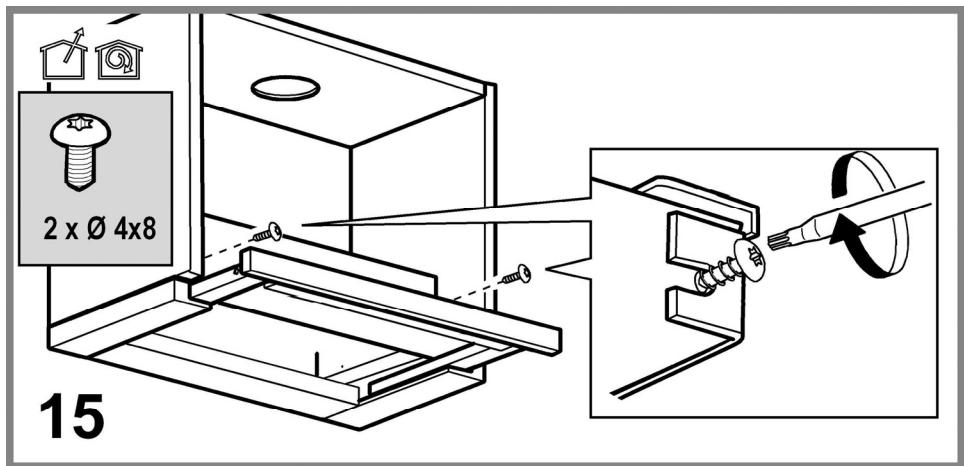

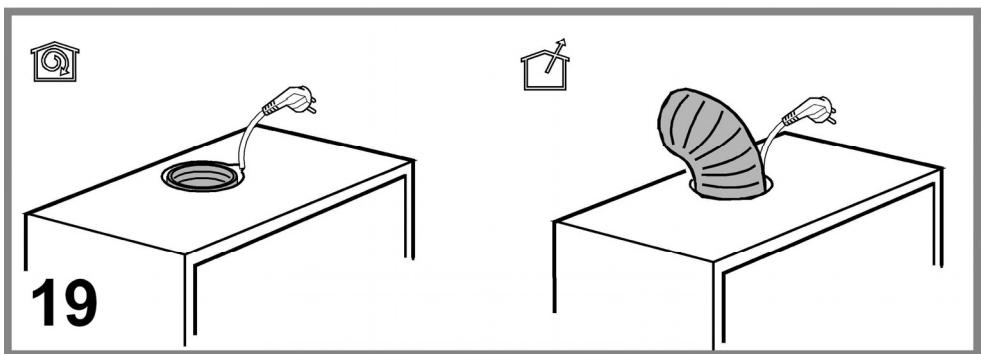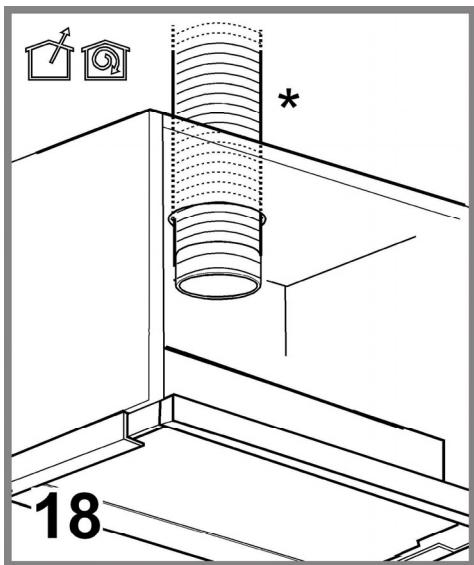

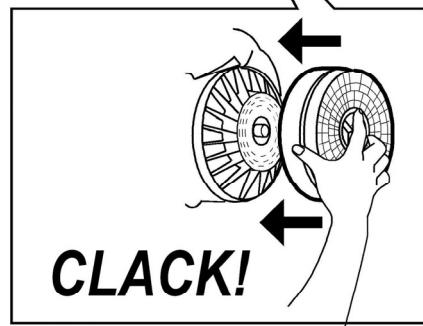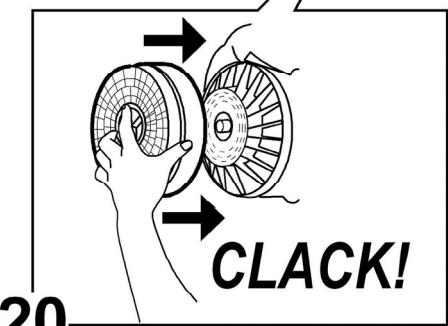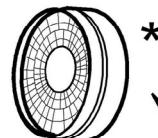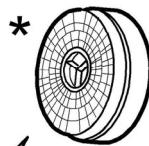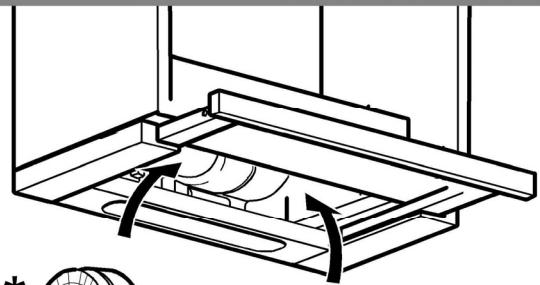

21

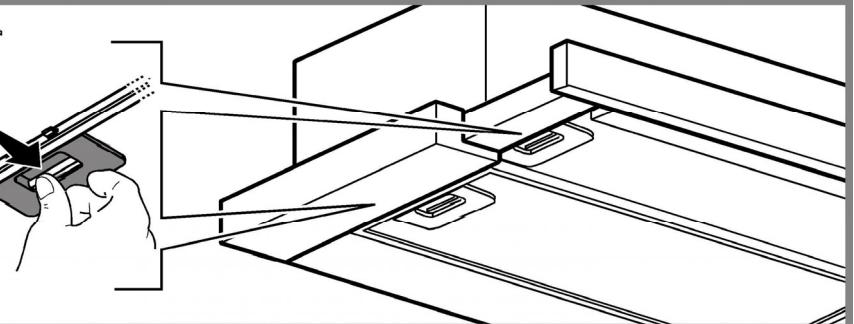

EN - Instruction on mounting and use

Closely follow the instructions set out in this manual. All responsibility, for any eventual inconveniences, damages or fires caused by not complying with the instructions in this manual, is declined. The hood is conceived for the suction of cooking fumes and steam and is destined only for domestic use.

- ! It is important to conserve this booklet for consultation at any moment. In the case of sale, cession or move, make sure it is together with the product.
- ! Read the instructions carefully: there is important information about installation, use and safety.
- ! Do not carry out electrical or mechanical variations on the product or on the discharge conduits.

Note: the elements marked with the symbol “(*)” are optional accessories supplied only with some models or elements to purchase, not supplied.

Caution

WARNING! Do not connect the appliance to the mains until the installation is fully complete.

Before any cleaning or maintenance operation, disconnect hood from the mains by removing the plug or disconnecting the mains electrical supply.

Always wear work gloves for all installation and maintenance operations.

The appliance is not intended for use by children or persons with impaired physical, sensorial or mental faculties, or if lacking in experience or knowledge, unless they are under supervision or have been trained in the use of the appliance by a person responsible for their safety.

This appliance is designed to be operated by adults, children should be monitored to ensure that they do not play with the appliance.

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.

Never use the hood without effectively mounted grating!

The hood must NEVER be used as a support surface unless specifically indicated.

The premises where the appliance is installed must be sufficiently ventilated, when the kitchen hood is used together with other gas combustion devices or other fuels.

The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose such as discharging exhaust fumes from appliances burning gas or other fuels.

The flaming of foods beneath the hood itself is severely prohibited.

The use of exposed flames is detrimental to the filters and may cause a fire risk, and must therefore be avoided in all circumstances.

Any frying must be done with care in order to make sure that the oil does not overheat and ignite.

Accessible parts of the hood may become hot when used with cooking appliance.

With regards to the technical and safety measures to be

adopted for fume discharging it is important to closely follow the regulations provided by the local authorities.

The hood must be regularly cleaned on both the inside and outside (AT LEAST ONCE A MONTH).

This must be completed in accordance with the maintenance instructions provided in this manual). Failure to follow the instructions provided in this user guide regarding the cleaning of the hood and filters will lead to the risk of fires.

Do not use or leave the hood without the lamp correctly mounted due to the possible risk of electric shocks.

We will not accept any responsibility for any faults, damage or fires caused to the appliance as a result of the non-observance of the instructions included in this manual.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For further detailed information regarding the process, collection and recycling of this product, please contact the appropriate department of your local authorities or the local department for household waste or the shop where you purchased this product.

Additional Installation Specifications:

Use only the fixing screws supplied with the product for installation.

Use the correct length screws which are identified in the Installation Guide

WARNING! Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

Use

The hood is designed to be used either for exhausting or filter version.



Ducting version

In this case the fumes are conveyed outside of the building by means of a special pipe connected with the connection ring located on top of the hood.

Attention! The exhausting pipe is not supplied and must be purchased apart.

Diameter of the exhausting pipe must be equal to that of the connection ring.

In the horizontal runs the exhausting pipe must be slightly slanted (about 10°) and directed upwards to vent the air easily from the room to the outside.

Attention! If the hood is supplied with active charcoal filter, then it must be removed.

Connect the hood and discharge holes on the walls with a diameter equivalent to the air outlet (connection flange).

- ! Use a duct of the minimum indispensable length.
- ! Use a duct with as few elbows as possible (maximum elbow angle: 90°).
- ! Avoid drastic changes in the duct cross-section.
- ! Use a duct as smooth as possible inside.
- ! The duct must be made of certified material.

Attention! If the hood is supplied with carbon filter, then it must be removed.



Filter version

One active charcoal filter is needed for this and can be obtained from your usual retailer.

The filter removes the grease and smells from the extracted air before sending it back into the room through the upper outlet grid.

Attention! If the hood is not supplied with carbon filter, then it must be ordered and mounted.

Installation

The minimum distance between the supporting surface for the cooking equipment on the hob and the lowest part of the range hood must be not less than 50cm from electric cookers and 65cm from gas or mixed cookers.

If the instructions for installation for the gas hob specify a greater distance, this must be adhered to.



Electrical connection

The mains power supply must correspond to the rating indicated on the plate situated inside the hood. If provided with a plug connect the hood to a socket in compliance with current regulations and positioned in an accessible area, after installation. If it not fitted with a plug (direct mains connection) or if the plug is not located in an accessible area, after installation, apply a double pole switch in accordance with standards which assures the complete disconnection of the mains under conditions relating to over-current category III, in accordance with installation instructions.

Warning! Before re-connecting the hood circuit to the mains supply and checking the efficient function, always check that the mains cable is correctly assembled.

The hood is provided with a special power cable ; if the cable is damaged, request a new one from Technical Service.

Mounting

Before beginning installation:


- Check that the product purchased is of a suitable size for the chosen installation area.
- Remove the charcoal (*) filter/s if supplied (see also relative paragraph). This/these is/are to be mounted only if you want to use the hood in the filtering version.
- Check (for transport reasons) that there is no other supplied material inside the hood (e.g. packets with screws (*), guarantees (*), etc.), eventually removing them and keeping them.
- If possible, disconnect and move freestanding or slide-in range from cabinet opening to provide easier access to rear wall/ceiling. Otherwise put a thick, protective covering over countertop, cooktop or range to protect from damage and debris. Select a flat surface for assembling the unit. Cover that surface with a protective covering and place all canopy hood parts and hardware in it.
- In addition check whether near the installation area of the hood (in the area accessible also with the hood mounted) an electric socket is available and it is possible to connect a fumes discharge device to the outside (only suction version).
- Carry out all the masonry work necessary (e.g. installation of an electric socket and/or a hole for the passage of the discharge tube).

This hood is designed for fitting in a cabinet or on some other support.



Operation

The hood is fitted with a control panel with aspiration speed selection control and a light switch to control cooking area lights.

OFF!

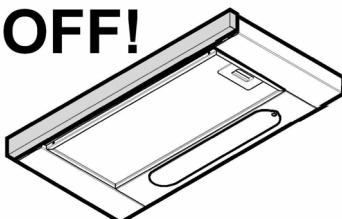

ON!

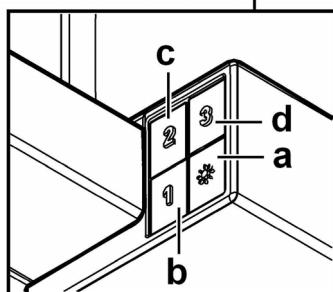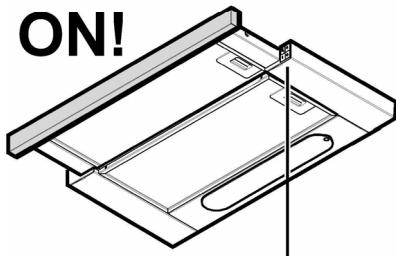

- a. ON/OFF light switch
- b. Speed 1/OFF switch
- c. 2-speed selection
- d. 3-speed selection

Use the high suction speed in cases of concentrated kitchen vapours. It is recommended that the cooker hood suction is switched on for 5 minutes prior to cooking and to leave in operation during cooking and for another 15 minutes approximately after terminating cooking.

Maintenance

ATTENTION! Before performing any maintenance operation, isolate the hood from the electrical supply by switching off at the connector and removing the connector fuse.

Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket.

Cleaning

The cooker hood should be cleaned regularly (at least with the same frequency with which you carry out maintenance of the fat filters) internally and externally. Clean using the cloth dampened with neutral liquid detergent. Do not use abrasive products. **DO NOT USE ALCOHOL!**

WARNING: Failure to carry out the basic cleaning recommendations of the cooker hood and replacement of the filters may cause fire risks.

Therefore, we recommend observing these instructions. The manufacturer declines all responsibility for any damage to the motor or any fire damage linked to inappropriate maintenance or failure to observe the above safety recommendations.

Grease filter

Fig. 10-21

Traps cooking grease particles.

The **grease filter** must be cleaned once a month using non aggressive detergents, either by hand or in the dishwasher, which must be set to a low temperature and a short cycle. When washed in a dishwasher, the grease filter may discolour slightly, but this does not affect its filtering capacity.

To remove the grease filter, pull the spring release handle.

Charcoal filter (filter version only)

Fig. 20

It absorbs unpleasant odours caused by cooking.

The saturation of the **charcoal filter** occurs after more or less prolonged use, depending on the type of cooking and the regularity of cleaning of the grease filter.

In any case it is necessary to replace the cartridge at least every four months.

The charcoal filter may NOT be washed or regenerated.

Remove the grease filters.

Apply one charcoal filter each side and hook in onto the hood. Refit the grease filter.

Replacing lamps

Disconnect the hood from the electricity.

Warning! Prior to touching the light bulbs ensure they are cooled down.

Extract the drawer completely.

Remove the grill.

Replace the damaged lamp.

Use Ø35mm E14 28W halogen candle lamps only.

Put the grill back.

If the lights do not work, make sure that the lamps are fitted properly into their housings before you call for technical assistance.

SV - Monterings- och bruksanvisningar

Följ noga instruktionerna i denna manual. Tillverkaren frånsäger sig allt ansvar för eventuella funktionsfel, skador eller bränder som uppstår på apparaten på grund av att instruktionerna i denna manual inte har respekterats. Fläkten har tillverkats för utsugning av matos och ånga som bildas vid matlagning och är endast ämnad för privat bruk.

- ! Det är viktigt att spara denna instruktionsbok så att den når som helst är tillgänglig för framtida konsultationer. I händelse av försäljning, överlätelse eller flytt skall instruktionsboken alltid följa med produkten.
- ! Läs instruktionerna noga: dessa tillhandahåller viktig information beträffande installation, användning och säkerhet.
- ! Utför inga elektriska eller mekaniska ändringar på produkten eller avledningskanalerna.

OBS: Delar som är märkta med symbolen "(*)" är extra tillbehör som endast medlevereras med vissa modeller, eller icke medlevererade delar som ska införskaffas separat.

Varningsföreskrifter

Varning! Anslut inte apparaten till elnätet förrän installationen är helt slutförd.

Gör alltid fläkten strömlös innan någon typ av underhållsarbete eller rengöring inleds genom att dra ur kontakten eller slå av bostadens huvudströmbrytare.

Använd alltid skyddshandskar vid installation och underhåll.

Apparaten får inte användas av barn eller personer med reducerad rörelseförmåga eller mental kapacitet, eller personer som saknar erfarenhet och kännedom om apparaten, sättlvida inte användandet övervakas eller instruktioner ges av erfaren person som ansvarar för säkerheten.

Barn får inte lämnas utan uppsikt för att förhindra att de leker med apparaten.

Fläkten får aldrig användas utan att gallret är korrekt monterat!

Fläkten får ALDRIG användas som avställningsyta om inte detta är uttryckligen angivet.

Lokalen skall vara ordentligt ventilerad när köksfläkten används tillsammans med andra apparater vilka matas med gas och andra typer av bränsle.

Utbläsningsluften får inte ledas in i rökkanal som används för avledning av rökångor som kommer från apparater vilka matas med gas eller andra typer av bränsle.

Det är strängt förbjudet att flambera mat under fläkten.

Öppna lågor skadar filtren och kan orsaka brand och skall därför undvikas i alla lägen.

Frityrkokning skall ske under uppsikt för att undvika att överhettad olja fattar eld.

Vid användning tillsammans med spisar och matlagningsutrustning kan tillgängliga delar hettas upp avsevärt.

Vad beträffar de tekniska och säkerhetsåtgärder som skall vidtas för avledning av utbläsningsluften, skall de föreskrifter som utfärdats av lokala myndigheter noga efterlevas.

Rengör fläkten ofta, såväl utvändigt som invändigt. (MINST

EN GÅNG I MÅNADEN, och respektera under alla händelser samtliga underhållsinstruktioner i denna manual).

Bristande rengöring av fläkten och filtren samt ett uteblivet byte av filtren medför brandfara.

Använd eller lämna aldrig fläkten utan korrekt imonterade lampor för att undvika risken för elektriska stötar.

Tillverkaren frånsäger sig allt ansvar för eventuella problem eller bränder som orsakats av att instruktionerna i denna manual inte efterlevts.

Denna produkt är märkt enligt EG-direktiv 2002/96/EEC beträffande elektriskt och elektroniskt avfall (Waste Electrical and Electronic Equipment, WEEE).

Genom att säkerställa en korrekt kassering av denna produkt bidrar du till att förhindra potentiella, negativa konsekvenser för vår miljö och vår hälsa, som annars kan bli följd om produkten inte hanteras på rätt sätt.



Symbolen  på produkten, eller i medföljande dokumentation, indikerar att denna produkt inte får behandlas som vanligt hushållsavfall. Den skall i stället lämnas in på en lämplig uppsamlingsplats för återvinning av elektrisk och elektronisk utrustning. Produkten måste kasseras enligt lokala miljöbestämmelser för avfallshantering.

För mer information om hantering, återvinning och återanvändning av denna produkt, var god kontakta de lokala myndigheterna, ortens sophanteringstjänst eller butiken där produkten inhandlades.

Användning

Fläkten har tillverkats för att användas som utsugningsversion med utvärdig evakuering eller som filterversion med intern återcirkulation.



Utsugningsversion

Matoset leds ut ur lokalen med hjälp av ett avledningsrör som är fixerat på anslutningsflänsen.

Avledningsrören skall ha samma diameter som anslutningsflänsen.

Varning! Avledningsrören medlevereras inte och skall införskaffas separat.

Röret skall, även när det är horisontellt draget, alltid luta lätt (cirka 10°) uppåt, så att luften lätt kan ledas ut ur lokalen.

I det fall fläkten är försedd med kolfILTER skall dessa tas ur.

Rören och utloppssöppningarna i väggen med vilka fläkten skall anslutas bör ha samma diameter som luftutsläppet (anslutningsflänsen).

! Använd ett så kort rör som möjligt.

! Röret skall vara så rakt som möjligt (högsta tillåtna vinkel på böjarna 90°).

! Undvik stora skillnader i rörets tvärsnittsarea.

! Använd rör vars insida är så slät som möjligt.

! Röret skall vara tillverkat av i lag godkända material.

Varning! Om fläkten är utrustad med ett kolfILTER, skall detta avlägsnas.



Filterversion

Den utsugna luften avfettas och befrias från odörer innan den leds ut i lokalen igen. När fläkten används med denna version är det nödvändigt att installera ett extra aktivt kolfiltersystem.

Varning! Om fläkten inte är utrustad med ett kolfILTER, skall ett sådant beställas och monteras innan fläkten kan sättas i bruk.

Installation

Minsta tillåtna avstånd mellan kokkärlens stödtyta på spishällen och köksfläktes underkant är 50cm om det är frågan om en elektrisk spis och 65cm om det är frågan om gasspis eller kombinerad gashäll.

Om spishällets instruktioner anger ett större avstånd skall detta respekteras.



Elektrisk anslutning

Nätspänningen skall motsvara spänningen som anges på märkplåten som sitter inne i fläkten. Om fläkten är utrustad med stickkontakt skall denna anslutas till ett uttag som är lättillgängligt även efter installationen och som uppfyller gällande föreskrifter. I det fall fläkten saknar stickkontakt (*direktanslutning till nätet*), eller om uttaget är placerat på en svåråtkomlig plats skall en godkänd tvåpolig strömbrytare installeras som garanterar en fullkomlig frånkoppling från nätet i samband med överspänningsskädd III, i enlighet med installationsbestämmelserna.

Varning! kontrollera innan fläktens krets ansluts med nätspänningen att den fungerar korrekt och är korrekt monterad.

Fläkten är försedd med en speciell elkabel, kontakta därför vårt tekniska servicekontor i det kabeln skadats.

Montering

Innan installationen påbörjas:


- Kontrollera att den införskaffade produktens dimensioner är lämpliga för installationsplatsen.
- Ta ur det/de aktiva kolfiltret/n om sådana är medlevererade (se även den härfor gällande paragrafen). Denna /dessa monteras tillbaka endast om fläkten skall användas som filterversion.
- Kontrollera att inget bifogat material (till exempel pásar med skruvar, garantihandlingar etc.) har placerats inne i fläkten (av transportskål), avlägsna eventuellt och spar.
- Om det är möjligt skall möbler under och intill fläktens installationsområde kopplas ur och avlägsnas i syftet att öka åtkomligheten till taket/väggen där fläkten skall installeras. I annat fall skall möbler och delar i området intill installationsplatsen så långt det är möjligt skyddas. Välj en plan yta och täck den med ett skyddande överdrag där fläkten och medlevererade delar läggs upp.
- Kontrollera också att ett elektriskt uttag finns i närheten av fläktens installationsplats (på tillgänglig plats även när fläkten är monterad) och att det går att ansluta fläkten till en anordning som leder ut röken utomhus (gäller endast Utsugningsversionen).
- Utför alla nödvändiga väggarbeten (t.ex.: installationen av ett eluttag och/eller en öppning för avledningsrörts passage).

Denna typ av fläkt skall vara infälld i ett köksskåp eller annan typ av stödstruktur.



Funktion

Fläkten är utrustad med en manöverpanel med en hastighetskontroll och en strömbrytare för spishällens belysning.

OFF!

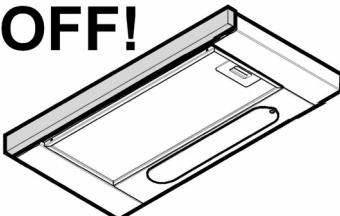

ON!

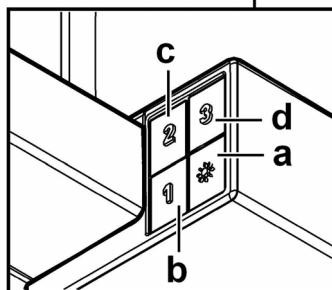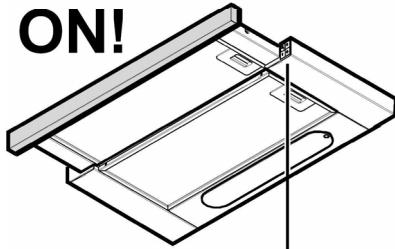

- a. ON/OFF-Strömbrytare för belysning.
- b. Strömbrytare för OFF/Hastighet 1
- c. Val av hastighet 2
- d. Val av hastighet 3

Använd en högre hastighet om matoset är mycket koncentrerat. Vi rekommenderar att starta luftevakueringen 5 minuter innan matlagningen inleds och låta den fungera i cirka 15 minuter efter avslutad matlagning.

Underhåll

Varning! Gör alltid fläkten strömlös innan någon typ av underhållsarbete eller rengöring inleds genom att slå ifrån bostadens huvudströmbrytare.

Rengöring

Fläkten skall rengöras ofta, såväl invändigt som utvändigt (åtminstone med samma underhållsintervall som för fettfiltren). Använd en trasa fuktad med neutrala rengöringsmedel vid rengöring.

Undvik produkter som innehåller slipmedel.

ANVÄND INTE ALKOHOL!

Varning: Observera att en bristande rengöring av apparaten och icke utförda filterbyten kan medföra brandrisk. Följ därför ovanstående instruktioner noga.

Tillverkaren frånsäger sig allt ansvar för eventuella motorskador, eldsvådor beroende på ett bristande underhåll eller att dessa instruktioner inte respekterats.

Observera att en bristande rengöring av apparaten och filtren kan medföra brandrisk. Följ därför ovanstående instruktioner noga.

Fettfilter

Fig. 10-21

Detta suger upp fettpartiklar som bildas i samband med matlagningen.

Filtret skall rengöras en gång i månaden, med ett milt rengöringsmedel, för hand eller i diskmaskin, med låg temperatur och kort program.

Vi tvätt i diskmaskin kan fettfiltret av metall missfärgas utan att detta på något sätt påverkar filtrets uppsugningsförmåga.

När filtret skall monteras ur drar man i handtaget som lossas med hjälp av en fjäder.

Kolfilter (gäller endast filterversionen)

Fig. 20

Kolfiltret fångar upp obehagliga odörer som uppstår i samband med matlagningen.

Kolfiltret mättas efter en mer eller mindre lång tidsperiod beroende på vilken utsträckning fläkten används, på typen av matlagning och hur regelbundet fettfiltren rengörs. Det är under alla händelser nödvändigt att ersätta kolfilterpatronen minst var 4 månad.

Filtret kan INTE rengöras eller återanvändas.

Avlägsna fettfiltret.

Applicera det laterala kolfiltret och haka fast det på fläkten. Sätt tillbaka fettfiltret.

Byte av Lampor

Koppla ur apparaten från elnätet.

Varning! Kontrollera att lamporna har svalnat innan ni vidrör dem.

Dra ut den utdragbara lådan helt.

Ta av gallret.

Byt den trasiga lampan.

Använd enbart halogena kronljuslampor Ø35mm E14 28W.

Montera tillbaka gallret.

I det fall belysningen inte fungerar, kontrollera att lamporna är korrekt iskruvade i sitt sätt innan ni kontaktar det tekniska servicekontoret.



Hood Elica ELITE14 LUX GRIX/A/60

Class: D

Control type: Buttons

Designer: Elica Design Center

Duct Size (mm) (mm): 120

Grease filter type: Multilayer aluminum

Illumination: LED

Lamp power (W): 3

Motor included: Yes

Motor power (W): 121

Noise level (high speed) (dB): 62

Number of bulbs: 2

Number of engines: 1

Speed number: 3

Structure Color: Silver, Stainless-steel

Structure Material: Stainless steel

Washable filter: Yes



Filter Elica 14 Lux Grix/A/61

Elica Carbon Air Filter 2pcs

DECLARATION OF CONFORMITY



Name and address of the manufacturer:	ELICA S.p.A. via Ermanno Casoli 2, 60044 Fabriano (AN) ITALY
Product:	Domestic Range Hood
Type Ref.	E123B II
Model ID:	E123BII-aaa-bbb Model ID is always a string of 15 alphanumeric characters, where the first 7 digits identify the type. Any blank digit is replaced with the letter X. aaa = [001 +999] Electrical Configuration Code (see annex 1) bbb = [001 +999] Energy Label & Ecodesign Directive Code (each code identify a specific set of performances)

Ellica S.p.A. declares under its sole responsibility that the risk analysis conducted on the products, subject of the present declaration, has highlighted that all potential risks associated with them are of electrical, mechanical or thermal nature; furthermore they can be related to possible fire hazards, electromagnetic interference disturbances or to the presence of hazardous chemicals. It is deemed that the requirements, defined by Directives and harmonized standards listed below, are such as to cover the risks mentioned above.

ELICA S.p.A. declares under its sole responsibility that the product(s) described above are in conformity with the following European Directives and Regulations:

SAFETY

Directive 2014/35/EU of the European parliament and of the Council of 26 February 2014 on the harmonisation of the laws of Member States relating to electrical equipment designed for use within certain voltage limits.

Applied Standards:	
EN 60335-1:2012 + A11:2014 + A13:2017	EN 62233:2008
EN 60335-2-31:2014	

EMC

Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the approximation of the laws of the Member States relating to electromagnetic compatibility

Applied Standards:	
EN 55014-1:2017	EN 61000-3-2:2014
EN 55014-2:2015	EN 61000-3-3:2013

RoHS

Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain substances in electrical and electronic equipment

Applied Standards:	
EN 50581:2012 (EN62321:2008)	

ECODESIGN

DIRECTIVE 2009/125/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 21 October 2009 establishing a framework for the setting of ecodesign requirements for energy-related products

- * COMMISSION REGULATION (EU) No 66/2014 of 14 January 2014 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for domestic ovens, hobs and range hoods

Applied Standards:

EN 61591:1997 + A1:2006 + A2:2011 + A11:2014 + A12:2015; EN 60704-1:2010 + A11:2012;
 EN 60704-2-13:2011; EN 50564:2011; ISO 5167-1:2003; ISO 5167-3:2003; ISO 3741:2010.

- **COMMISSION REGULATION (EU) No 327/2011 of 30 March 2011 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for fans driven by motors with an electric input power between 125 W and 500 kW**
- **COMMISSION REGULATION (EC) No 244/2009 of 18 March 2009 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for non-directional household lamps**
- **COMMISSION REGULATION (EC) No 245/2009 of 18 March 2009 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for fluorescent lamps without integrated ballast, for high intensity discharge lamps, and for ballasts and luminaires able to operate such lamps, and repealing Directive 2000/55/EC of the European Parliament and of the Council**
- **COMMISSION REGULATION (EU) No 1194/2012 of 12 December 2012 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for directional lamps, light emitting diode lamps and related equipment**
- **COMMISSION REGULATION (EU) No 2015/1428 of 25 August 2015, amending Commission Regulation (EC) No 244/2009 with regard to ecodesign requirements for non-directional household lamps and Commission Regulation (EC) No 245/2009 with regard to ecodesign requirements for fluorescent lamps without integrated ballast, for high intensity discharge lamps, and for ballasts and luminaires able to operate such lamps and repealing Directive 2000/55/EC of the European Parliament and of the Council and Commission Regulation (EU) No. 1194/2012 with regard to ecodesign requirements for directional lamps, light emitting diode lamps and related equipment.**

ELICA S.p.A. declares under its sole responsibility that the product(s) described above are also in conformity with the following additional European Directives and Regulations not mandatory for CE marking:

LABELLING

DIRECTIVE 2010/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 19 May 2010 on the indication by labelling and standard product information of the consumption of energy and other resources by energy-related products

- **COMMISSION DELEGATED REGULATION (EU) No 65/2014 of 1 October 2013 supplementing Directive 2010/30/EU of the European Parliament and of the Council with regard to the energy labelling of domestic ovens and range hoods**

REACH

REGULATION (EC) No 1907/2006 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 18 December 2006 concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH), establishing a European Chemicals Agency, amending Directive 1999/45/EC and repealing Council Regulation (EEC) No 793/93 and Commission Regulation (EC) No 1488/94 as well as Council Directive 76/769/EEC and Commission Directives 91/155/EEC, 93/67/EEC, 93/105/EC and 2000/21/EC.

Signed for and on behalf of manufacturer:

Fabriano li 23/07/2018

Antonio Recinella
Chief Executive Officer

ANNEX 1

Explanation of Type code/Electrical configuration:

E123B II = Typology of construction

II = Insulation Class

xKy, xSy, xSly, xSBy, xWEy or xMy = Number and Typology of Motor(s)

xL, xA, xB, xH, xH1, xF, xE, xN, xNA, xNB, xSE or xP = Number and typology of lamps

P, S, E, T, R, TE, CT, ST, AST, RFT, SH, ST, PT, ASC, SH, IT or T1 = Kind of control(s)

A, B, C, D, E or H = Voltage and Frequency ratings

Remark: "x" = is a number (one or more digit) and "y" = is alphanumerical string.

TYPE: E123B II

Electrical Configuration Code aaa = [001 ÷ 999]	Electrical Configuration	Electrical Configuration Code aaa = [001 ÷ 999]	Electrical Configuration
001	1K28AN 2A I B	026	1K42BN 2H P B
002	1K28AN 2A P B	027	1K42BN 2F P B
003	1K28AN 2F P B	028	1K28AN 2B I B
004	1K28AN 2H P B	029	1K28AN 2B P B
005	1K37AN 2A I B	030	1K37AN 2B I B
006	1K37AN 2A P B	031	1K37AN 2B P B
007	1K37AN 2F P B	032	1S25AF 2B P B
008	1K37AN 2H P B	033	1S25AN 2B P B
009	1S25AN 2A P B	034	V 2B I B
010	1S25AN 2F P B	035	1K37AN 2E P B
011	1S25AN 2H P B	036	1K28BN 2B I B
012	V 2A I B	037	1K28BN 2E P B
013	1S25AF 2H P B		
014	1S25AF 2F P B		
015	1K42AN 2B P B		
016	1S25AF 2A P B		
017	1K42AN 2A P B		
018	1K42AN 2F P B		
019	1K42AN 2H P B		
020	1K28BN 2B P B		
021	1K42BN 2B P B		
022	1K28BN 2A P B		
023	1K28BN 2H P B		
024	1K28BN 2F P B		
025	1K42BN 2A P B		

elica
una nuova

IDENTITY DECLARATION

Elica S.p.A declares that the following model is identical in all respect to the corresponding types

Fabriano, 31/01/2019

Product Certification
Luca David


PHONE +39 0732 6101
FAX +39 0732 610248
INFO@ELICA.COM
WWW.ELICA.COM

AN ISO 9001 ISO 14001
CERTIFIED COMPANY

TOP
WORLD



Ref. Cert. No.

DK-65518-M1-ULIEC SYSTEM FOR MUTUAL RECOGNITION OF TEST CERTIFICATES FOR ELECTRICAL EQUIPMENT (IECEE)
CB SCHEME**CB TEST CERTIFICATE**

Product

Range Hood

Name and address of the applicant

Elica SPA
VIA ERMANNO CASOLI 2
FABRIANO, 60044 AN Italy

Name and address of the manufacturer

Elica SPA
VIA ERMANNO CASOLI 2
FABRIANO, 60044 AN Italy

Name and address of the factory

ELICA GROUP POLSKA SP Z O O
UL INZYNIERSKA 3
JELCZ LASKOWICE, 55-221 Poland Additional Information on page 3

Ratings and principal characteristics

220-240 or 230V 50/60Hz, max 206 W
See Page 2-3

Trademark (if any)



Type of Customer's Testing Facility (CTF) Stage used

CTF Stage 3

Model / Type Ref.

E123B II
See Page 2-3

Additional information (if necessary may also be reported on page 2)

The original report was revised to include technical modifications
 Additional Information on page 3

A sample of the product was tested and found to be in conformity with

IEC 60335-1:2010, IEC 60335-2-31:2012

As shown in the Test Report Ref. No. which forms part of this Certificate

18-4788571150.16.1 issued on 2018-10-05

This CB Test Certificate is issued by the National Certification Body



- UL (US), 333 Prinston Rd E, 60002, Northbrook, USA
UL (Denmark), Bemprang 5A DK-2700 Ballerup, DENMARK
UL (JP), Marunouchi Trust Tower Main Building 6F, 1-6-3 Marunouchi, Chiyoda-ku, Tokyo 100-0005, JAPAN
UL (CA), 7 Underwriters Road, Toronto, M1R 3B4 Ontario, CANADA

Date: 2018-10-09
Original Issue Date: 2017-07-27

Signature:

For full legal entity names see www.ul.com/ncbnames

Jan-Erik Storgaard



Ref. Certif. No.

DK-65518-M1-UL

Model Details:

ADDITIONAL INFORMATION						
Type/Code Identification						
This Test Report covers the following type and associated code identifying the Electrical configuration: Type: E123B II + Code, (i.e. E123B II 1K28AN 2A P B)						
ELECTRICAL CONFIGURATIONS EVALUATED IN THE PREVIOUS TEST REPORT (ORIG.):						
No.	Type	Code (Electrical Configuration)	Rated Input (W)	Rated Voltage (V)	Frequency (Hz)	Distance from Electric/gas Hob (cm)
1	E123B II	1K28AN 2A I B	156	220-240 or 230	50/60	50/65
2	E123B II	1K28AN 2A P B	156	220-240 or 230	50/60	50/65
3	E123B II	1K28AN 2F P B	115	220-240 or 230	50/60	50/65
4	E123B II	1K28AN 2H P B	140	220-240 or 230	50/60	50/65
5	E123B II	1K37AN 2A I B	206	220-240 or 230	50/60	50/65
6	E123B II	1K37AN 2A P B	206	220-240 or 230	50/60	50/65
7	E123B II	1K37AN 2F P B	165	220-240 or 230	50/60	50/65
8	E123B II	1K37AN 2H P B	190	220-240 or 230	50/60	50/65
9	E123B II	1S25AN 2A P B	186	220-240 or 230	50/60	50/65
10	E123B II	1S25AN 2H P B	170	220-240 or 230	50/60	50/65
11	E123B II	1S25AN 2F P B	145	220-240 or 230	50/60	50/65
12	E123B II	1S25AF 2A P B	171	220-240 or 230	50/60	50/65
13	E123B II	1S25AF 2H P B	155	220-240 or 230	50/60	50/65
14	E123B II	1S25AF 2F P B	129	220-240 or 230	50/60	50/65
15	E123B II	V 2A I B	56	220-240 or 230	50/60	50/65
16	E123B II	1K42AN 2B P B	126	220-240 or 230	50/60	50/65
17	E123B II	1K42AN 2A P B	176	220-240 or 230	50/60	50/65
18	E123B II	1K42AN 2F P B	134	220-240 or 230	50/60	50/65
19	E123B II	1K42AN 2H P B	160	220-240 or 230	50/60	50/65
20	E123B II	1K28BN 2B P B	121	220-240 or 230	50/60	50/65
21	E123B II	1K28BN 2A P B	171	220-240 or 230	50/60	50/65
22	E123B II	1K28BN 2F P B	129	220-240 or 230	50/60	50/65
23	E123B II	1K28BN 2H P B	155	220-240 or 230	50/60	50/65
24	E123B II	1K42BN 2B P B	146	220-240 or 230	50/60	50/65
25	E123B II	1K42BN 2A P B	196	220-240 or 230	50/60	50/65
26	E123B II	1K42BN 2F P B	154	220-240 or 230	50/60	50/65
27	E123B II	1K42BN 2H P B	180	220-240 or 230	50/60	50/65
28	E123B II	1K28AN 2B I B	108	220-240 or 230	50/60	50/65
29	E123B II	1K28AN 2B P B	108	220-240 or 230	50/60	50/65
30	E123B II	1K37AN 2B I B	156	220-240 or 230	50/60	50/65
31	E123B II	1K37AN 2B P B	156	220-240 or 230	50/60	50/65
32	E123B II	1S25AF 2B P B	121	220-240 or 230	50/60	50/65
33	E123B II	1S25AN 2B P B	136	220-240 or 230	50/60	50/65
34	E123B II	V 2B I B	6	220-240 or 230	50/60	50/65

Additional information (if necessary)



- UL (US), 333 Pringster Rd IL 60062, Northbrook, USA
 UL (Denmark), Bonupvang 5A DK-2750 Ballerup, DENMARK
 UL (JP), Marunouchi Trust Tower Main Building 6F, 1-8-3 Marunouchi, Chiyoda-ku, Tokyo 100-0005, JAPAN
 UL (CA), 7 Underwriters Road, Toronto, M1R 3B4 Ontario, CANADA

For full legal entity names see www.ul.com/entitynames

Date: 2018-10-09
 Original Issue Date: 2017-07-27

Signature:
 Jan-Erik Storgaard



Ref. Certif. No.

DK-65518-M1-UL

ELECTRICAL CONFIGURATIONS EVALUATED IN THIS TEST REPORT (AMEND1):

35	E123B II	1K26BN 2B 1 B	121	220-240 or 230	50/60	50/65
36	E123B II	1K26AN 2E P B	105	220-240 or 230	50/60	50/65
37	E123B II	1K26BN 2E P B	120	220-240 or 230	50/60	50/65
38	E123B II	1K37AN 2E P B	155	220-240 or 230	50/60	50/65
39	E123B II	1K42AN 2E P B	125	220-240 or 230	50/60	50/65
40	E123B II	1K42BN 2E P B	145	220-240 or 230	50/60	50/65
41	E123B II	1S25AF 2E P B	120	220-240 or 230	50/60	50/65
42	E123B II	1S25AN 2E P B	135	220-240 or 230	50/60	50/65

Explanation of type/electrical configuration:

E123B	= Type of construction
II	= Insulation Class
xKy , xSy or V	= Number of Motors and Type of Motor or "V" Electric Valve
xA, xH, xF, xB or xE	= Number and kind of lamps ("A" high voltage Halogen Lamps, "H" low voltage halogen lamps, "F" CFL lamps, "B" Led Bulb Lamps or Led spot Lamps ("E"))
P or I	= Kind of Control ("P" Push Button Switch or "I" Rocker Switch)
B	= For UK (tested for/at 240V)

Remark: x is a number (one or more digit), y is a sequence of alphanumerical characters of any length

Factories:

ELICA SPA
LOCALITA MONTIRONE
MERGO, 60030 AN Italy

Additional Information:

Additionally evaluated to: EN 60335-1:2012/A11:2014, EN 60335-2-31:2014, EN 62233:2008, IEC 60335-1:2010/A1:2013

National differences specified in the CB Test Report

The original report was modified to include the following changes/additions:

- Added new electrical configurations
- Updated components

Additional information (If necessary)



- UL (US), 333 Pfingsten Rd IL 60062, Northbrook, USA
 UL (Denmark), Borupvang 5A DK-2799 Ballerup, DENMARK
 UL (JP), Marunouchi Trust Tower Main Building 6F, 1-8-3 Marunouchi, Chiyoda-ku, Tokyo 100-0006, JAPAN
 UL (CA), 7 Underwriters Road, Toronto, M1R 3B4 Ontario, CANADA

For full legal entity names see www.ul.com/incnames

Date: 2018-10-09
Original Issue Date: 2017-07-27

Signature:
Jan-Erik Storgaard